

Product Details



the water proof and durable inner bucket is made of good PP material, Non-toxic and tasteless.



Touchless sensor bin is based on Infrared induction, Low energy-consuming, 100% handsfree operation. Low energy-consuming. Battery Life: at least 20 times per day for 6 months.



Open the battery case in the cover, use 4x"AA" size alkaline batteries(not included)



Open the power switch at the behind of the dustbin. At this moment the red indicator lamp will be on for 3 seconds. Then it flashes once every 6 seconds which shows that the electric system works in the normal condition.



NOTE: pls keep drying after wash/clean the cover before use.





Instructions

1. Open the cover of the battery case at the bottom of the dustbin and equip it with four batteries 'D' or 'AA' (not included) according to the mark of "positive and negative pole.
2. Open the power switch at the behind of the dustbin. At this moment the red indicator lamp will be on for 3 seconds. Then it flashes once every 6 seconds which shows that the electric system works in the normal condition.
3. When throwing rubbish into it , you just keep your hand or objects about 10-15 cm above the inductive window, the cap will open automatically within 0.5 second ,then it will close automatically in 6 seconds after your hands or objects depart. Without departing it will be still open.
4. If you Press the left button in the inductive window (a button for manual operation), the cap will open, but it won't close automatically. This manual function is for you to throw rubbish frequently or take out the rubbish bag. If you want to close the cap, just press the right one .Then, the circuit system returns to the automatic process.
5.
 - 1) The indicator lamp in the normal waiting state flashes red (once every three seconds)
 - 2) When the cap automatically opens, the indicator lamp shows green.
 - 3) When the cap closes automatically, the indicator lamp shows red.
 - 4) While the cap is opened by hand, it flashes green (once every 6 seconds)
6. The batteries can be used for about 6 months supposing the dustbin opens or closes 20 times each day. When the batteries are nearly used up the indicator lamp flashes yellow once every three seconds.

Kindly Remind

1. Don't wash the outside dustbin because it `s equipped with many electronic units however you can clean it with a wet rag.
2. Don't press the cap of the dustbin when it is opening. If you done this, press the "close" button to return the dustbin to normal process.
3. Take out the used-up batteries in time in case the seeping liquid damages the electronic units.
4. Taken off the batteries if the dustbin leaving unused for long time.
5. Avoid sunlight direct on the sensor eyes.

